

Intruder

User's Manual

Aiken Amplification, Inc.

1225 Montague Avenue
Greenwood, SC, 29649

Tel: 864-993-8383

<http://www.aikenamps.com>

Contents

Getting Started.....	3
Front Panel Controls and Switches.....	5
Rear Panel Controls and Switches.....	7
Tube layout and replacement.....	9
Biasing.....	11
Speakers.....	13
Troubleshooting.....	14
Specifications.....	17

Getting Started

Congratulations on purchasing your new Aiken Intruder amplifier!

The Intruder is an all-tube amplifier, available in 18,30, or 50 watt versions. This amplifier is truly touch-sensitive, going from clean to crunch to singing leads by just adjusting the volume control on the guitar.

The design features two internally-jumpered channels, which are independently voiced,

to provide a wide range of tones from any guitar, using single-coil or humbucking pickups.

The amplifier was designed specifically to capture those old plexi/ali/bassman tones at less than ear-shattering volumes, with the addition of an effects loop and a very transparent master volume.

Features include:

All-tube signal path. Preamp tubes are 12AX7/ECC83. Output tubes are JJ/Tesla EL84 (18W) or SED (formerly Svetlana) EL34 (30W). Rectifier uses massive 3 amp 1000V ultra-fast recovery diodes (FREDs) for the utmost reliability without the RF noise "spikes" inherent in standard rectifiers.

Front panel controls/connections: Input jack, Volume 1 (bright), Volume 2 (dark), Bass, Mid, Treble, Presence, Output Level. Input channels are internally jumpered to allow a mix of the two volume controls to provide a wide range of tones, allowing the amplifier to work well with any guitar, either single-coil or humbucker. Exclusive Plexi/Ali front panel switch to reconfigure the preamp section to early "plexi" style for a full rich tone (great for warm clean tones) or the later aluminum, or "ali" style preamp, which is voiced brighter and tighter in the low end (best for distortion styles).

Unique frequency-compensated output level control. Unlike most master volumes, this control doesn't get thin or buzzy as you turn the volume down. The tonal quality rivals that of our built-in attenuators, and is infinitely variable, allowing fine control of output level. When turned all the way up, it is effectively out of the circuit completely, so it doesn't affect the full-volume tone/signal path at all.

Effects loop: 1/4" TRS (tip/ring/sleeve) insert style jack. Nominal 0dBu level allows use of line-level effects for lowest noise levels. The TRS insert jack allows use of a single TRS cable to connect the effects, instead of the two 1/4" cables normally required for an effects loop.

Rear panel controls/connections: AC mains input, international voltage selector allowing operation at 100V/120V/200V/220V/230V/240V 50/60Hz, impedance selector switch for 4, 8, or 16 ohm operation, two 1/4" speaker jacks, and effects loop jack. Also includes locking mil-style RV6L bias pot and three tip jacks for easy bias setting without having to remove the chassis from the cabinet.

Solid, finger-jointed birch-ply cabinet. The head is 20" wide, 8 3/4" tall, and 9" deep. The 1x12 combo is 23" wide, 18 1/2" tall, and 10 1/4" deep.

Solid 16-gauge steel chassis, zinc-plated, yellow chromate conversion coated for durability, corrosion-resistance and appearance. Front and rear faceplates are gold anodized aluminum for durability and a classic appearance.

All hand-wired, "military style" turret-board construction, using chassis-mounted tube sockets for ease of maintenance and reliability. Built to last.


Premium, tight-tolerance parts are used for reliability, including 2W 1% carbon film and metal film resistors, 5W metal oxide power resistors, 630V axial-leaded polypropylene film/foil capacitors, and low-noise, sealed, 2W mil-style RV4 pots.

Massive, custom-wound, high-interleave transformers, rated for over twice the maximum amplifier output power, allowing the amplifier to be run full power continuously, without failures.

Output power (at onset of clipping): 18W (2-EL84 model), 30W (2-EL34 30W model), or 50W (2-EL34 50W model) into 4, 8, or 16 ohms resistive load.

Available in a head configuration or a small-box combo format with a single 12" speaker. Our Aiken A12L speaker, which is based on the tone of a Greenback, but with better low end response, is standard.

Front Panel Controls and Switches

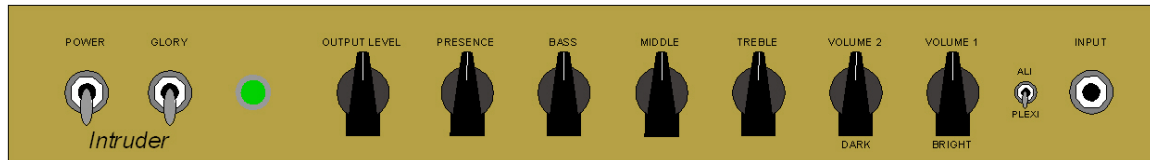

Input jack:

Plug your guitar in here and you are ready to rock!

Plexi/Ali switch:

This switch configures the preamp section to match either the warmer early "plexi/Bassman" style preamp circuits or the later and brighter "aluminum panel" circuits.

For full-volume output stage distortion/crunch tones, the plexi/ali switch is usually best put in the "ali" position, as this cuts some of the low end and adds a bit more gain and midrange boost on the second stage. Too much low end can sound "boomy" or "mushy" when playing wide open. The plexi setting is warmer, with more low end, and excels for clean tones or for fattening up bright single-coil pickup guitars, such as Telecasters.

Because the plexi/ali switch completely reconfigures the preamp circuitry, it can produce an audible "pop" or "thump" when switching. It is recommended that the volume controls be turned down before changing modes.

Volume 1:

Volume 1 is the "bright" channel volume control.

Volume 2:

Volume 2 is the "dark" channel volume control.

Treble:

The treble control adjusts the high frequency equalization.

Middle:

The middle control adjusts the midrange frequency equalization.

Bass:

The bass control adjusts the low frequency equalization.

Presence:

The presence control adjusts the high frequency equalization in the output stage. It acts similar to a Vox-style “cut” control, but only for very high frequencies. It is voiced specifically to take the “hair” off distortion tones to tame a bright or “buzzy” sounding speaker. When full up, the cut is essentially out of circuit. It is best used as a final tonal adjustment to add or remove “bite” from the distortion tone.

Output Level:

The output level control is a unique frequency-compensated master volume control. Unlike most conventional master volumes, this control doesn't get thin or buzzy as you turn the volume down. When turned all the way up, it is effectively out of the circuit completely, so it doesn't affect the full-volume tone/signal path at all.

Pilot lamp:

The pilot lamp lights when power is applied to the amplifier and the power switch is on. The pilot lamp features a screw-on “jewel” that can be removed from the front panel to replace the bulb without having to remove the chassis. The bulb is a standard #47 “bayonet” style bulb, available at most electronics supply stores.


Power switch:

The Power switch turns the amplifier on in the up position and off in the down position.

Glory switch:

What good is power without the glory? The Glory switch allows muting of the amplifier output when not in use. When the switch is in the up position, the amplifier is on, and when it is in the down position, the amplifier is on standby. The tube filaments remain on and warmed up, so the amplifier is ready to play as soon as it is taken off standby. The correct powerup sequence is to turn the amplifier on with the power switch and then, after it has had time to warm up, the Glory switch is turned on. When turning the amplifier off, the Glory switch should first be turned off, then the power is turned off after a few seconds.

Rear Panel Controls and Switches

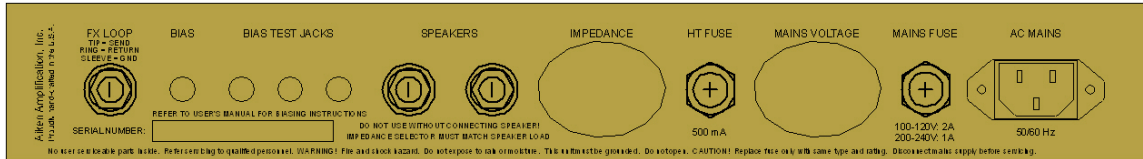

AC Mains:

Plug the supplied IEC mains cord into this outlet to provide power to the amplifier.

Mains Fuse:

18W amplifiers: 2A slo-blo for 100V/120V operation, 1A slo-blo for 200V-240V operation.

30W/50W amplifiers: 3A slo-blo for 100V/120V operation, 1½ A slo-blo for 200V-240V operation.

AC Mains voltage selector:

Set this switch to the appropriate position to match the mains voltage in the country in which you are using the amplifier. **WARNING: Do not adjust this control with the AC mains cord plugged in and the power on!!!** Damage to the amplifier will result if the switch is set to the wrong position. If you have any doubts as to which is the correct voltage for the country you are in, call the factory or inquire with someone locally who will know the correct mains voltage.

HT Fuse:

500mA fast-acting fuse

Impedance Selector:

The impedance selector allows selection of 4, 8, or 16 ohm output impedance to match the speaker in use. Be sure to set this switch to the appropriate setting for the speaker or speakers connected to the amplifier. All amplifiers are shipped from the factory with a single 16-ohm speaker or a pair of speakers wired in series to provide a 16-ohm load. This allows connection of an external 16 ohm cabinet to be used simultaneously with the internal speaker by setting the impedance selector to 8 ohms, or four 16-ohm cabinets can be used by setting the impedance selector to 4 ohms.

Speaker Jacks:

Two speaker jacks are provided to allow use of the amplifier with either the internal speaker (combo units only) or up to two external speaker cabinets. More than two external cabinets may be safely used with the amplifier, but this will require the use of "Y" cables for the extra two cabinet connections. Be sure to use only quality speaker cable -

do NOT, under any circumstance, use guitar cable to connect the amplifier to a speaker cabinet. Doing so may cause damage to the amplifier.

Effects Loop:

This is a 1/4" TRS (tip/ring/sleeve) insert style jack. The nominal 0dBu level allows use of line-level (pro) effects for lowest noise levels. The TRS insert jack allows use of a single TRS cable to connect the effects, instead of the two 1/4" cables normally required for an effects loop. The TRS cable (also called an "insert" cable) is a cable that has a stereo 1/4" jack on one end and breaks out into two mono 1/4" jacks that go into the input and output of the effects unit. These insert cables are available at most music stores (they are typically used to connect compressors or other effects to a single channel on a mixing board). Alternately, you can make or buy a stereo to two-mono "pigtail" adapter cable (available from places like Radio Shack) and use standard 1/4" cables to connect the effects.

Once properly connected, adjust the effects unit's input level control so the signal presence LED is lit (if there is one) and the clip LED occasionally lights on peaks or doesn't light at all, depending on the effect's requirements. Then adjust the effects unit's output level so the Intruder's volume is the same with the insert cable plugged into the back of the amp or unplugged. Refer to the effects unit user manual for proper adjustment in case it differs from these instructions.


Bias Test Jacks:

Three standard tip jacks are available to allow easy bias current measurements without removing the chassis. Refer to the section on biasing for instructions on the use of these jacks.

Bias:

A locking mil-style RV6 trimpot is provided to allow adjustment of bias current. The outer locknut must be loosened before adjusting the screwdriver-slot control. Refer to the section on biasing for further instructions.

Tube layout and replacement

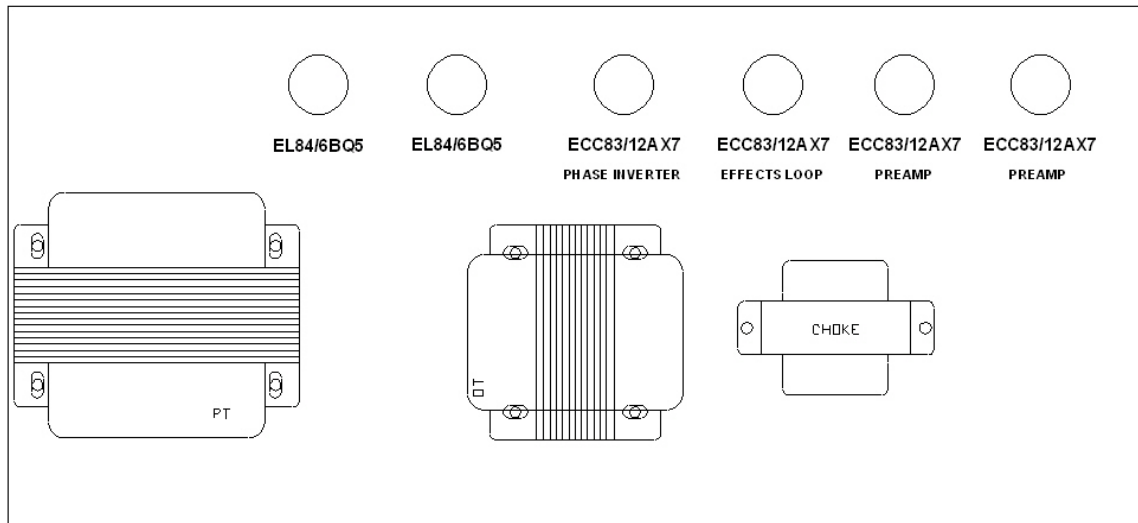

The Intruder uses four ECC83/12AX7 tubes and two 6BQ5/EL84 output tubes (or two EL34 tubes in the 30W or 50W version). The preamp tube function is as follows, starting at the side closest to the input jack: preamp 1 (ECC83/12AX7), preamp 2/cathode follower (ECC83/12AX7), effects loop driver/receiver (ECC83/12AX7), and phase inverter (ECC83/12AX7). The chassis top view layout is shown in the diagram above.

The preamp tubes are housed in removable "bayonet" metal shields. The shields can be removed by pushing down on them and rotating the shield to the left, then pulling it upwards off the tube. The tube can then be pulled out of the socket. The output tubes have spring wire retainers that can be slipped off to one side, allowing easy removal of the EL84 tubes.

You may freely substitute any 12xxx type tube in the two preamp and phase inverter positions. It won't hurt anything, and you may find some different tones you like. The 12AU7 is a good lower-gain tube, as is the 5751. Other choices are 12AY7, 12AT7, or 12AZ7. In addition, different manufacturer's tubes will sound different. Some people prefer the tone of various Ei, Sovtek, or other tubes, and some insist on NOS tubes for a true vintage tone. The JJ/Teslas are the least microphonic, but are a bit compressed sounding when compared to the longer-plate tubes. The Chinese 12AX7's are a good compromise between microphonics and a more "open-sounding", or less compressed tone. Feel free to experiment!

Note: vacuum tubes, especially output tubes, can get very hot in normal operation, and may cause burns if removed before they have a chance to cool down. Be sure to wait several minutes before replacing tubes to allow them to cool down. Do not, under any circumstances, remove or replace the tubes with the power on, as this could cause a deadly electrical shock should the glass break, exposing the high-voltage plate terminals. Also, be sure to pay attention to the orientation of the tubes when putting them back in the socket. The tube pinout is keyed so it can only be placed in the socket in one direction, and if the tube is forced in incorrectly, it can damage the tube or the ceramic socket. The octal tubes in the 30W model have a phenolic key that fits a corresponding keyhole in the socket. If this key is broken off, it will allow incorrect placement of the tube in the socket, which could result in damage to the amplifier. Be sure to carefully examine the tube before replacing it.

Output power reduction by using 6V6 tubes (30W models only):

It is possible to reduce the power of the 30W Intruder to around 18W to 20W by changing the two EL34 output tubes to 6V6 tubes. The amplifier will need to be rebiased before using, to insure the tubes are running at a safe idle current. In order to familiarize yourself with the biasing procedure, you should read the next section on biasing before making this change.

The proper procedure for changing from EL34 to 6V6 is as follows:

- (1) Turn off the amplifier.
- (2) Unscrew the locking nut on the rear panel bias potentiometer and turn the screwdriver bias adjustment fully counter-clockwise (anti-clockwise for our friends across the pond).
- (3) Remove the EL34 output tubes (Careful! They may be extremely hot if the amp has been on!)
- (4) Install the 6V6 output tubes
- (5) Set the impedance selector to half the normal setting. For example, if you have a 16 ohm cabinet connected, set the impedance selector to 8 ohms. If you have an 8 ohm cabinet, set the impedance selector to 4 ohms. If you have a 4 ohm cabinet, set the impedance selector to 4 ohms as well. If you are running two 16 ohm cabinets, set the impedance to 4 ohms. If you are running two 8 ohm cabinets, set the impedance to 4 ohms as well. You cannot safely run two 4 ohm cabinets. Note: you can try setting the impedance selector to the normal setting, i.e. matching the cabinet impedance. You may like the tone better that way, or not. Either way, it won't hurt anything.
- (6) Turn on the power switch and wait a few minutes for the tubes to warm up.
- (7) Bias the amplifier as indicated in the next section on biasing, but instead of setting the bias adjustment to a max range of 60mV on the test jacks, set it no higher than 30mV, typically around 25mV to 28mV for best tone.
- (8) Tighten back down the bias adjust locking nut, and you're ready to go.

To convert back to EL34 tubes:

- (1) Turn off the amplifier.
- (2) Unscrew the locking nut on the rear panel bias potentiometer and turn the screwdriver bias adjustment fully counter-clockwise (anti-clockwise for our friends across the pond).
- (3) Remove the 6V6 output tubes (Careful! They may be extremely hot if the amp has been on!)
- (4) Install the EL34 output tubes
- (5) Set the impedance selector to match the impedance of the cabinet you are using. For example, if you have a 16 ohm cabinet connected, set the impedance selector to 16 ohms. If you have an 8 ohm cabinet, set the impedance selector to 8 ohms. If you have a 4 ohm cabinet, set the impedance selector to 4 ohms. If you are running two 16 ohm cabinets, set the impedance to 8 ohms. If you are running two 8 ohm cabinets, set the impedance to 4 ohms. You cannot safely run two 4 ohm cabinets.
- (6) Turn on the power switch and wait a few minutes for the tubes to warm up.
- (7) Bias the amplifier as indicated in the next section on biasing, to a maximum of 60mV, typically around 45mV to 50mV for best tone.
- (8) Tighten back down the bias adjust locking nut, and you're ready to go.

Other tube types:

You can also use any of the following tube types in the 30W or 50W Intruder: 6L6, 5881, KT66. Bias them the same as you would for EL34 tubes, as described in the next section on biasing.

Biasing

Biasing is very easy, and doesn't require removing the chassis from the cabinet. You simply use a voltmeter (any inexpensive digital multimeter will do), set it for the smallest DC voltage range (typically 200mV). Then:

(1) Unplug any guitar cords going into the input jack. Turn the two volume controls all the way down (other control positions don't matter). Unscrew the lock nut on the bias pot on the rear panel, and turn the bias control all the way down (counterclockwise). Turn the Power switch on, wait a minute or so until the tubes have warmed up, then turn on the Glory switch. Wait a few more minutes for the tubes to reach their stable operating point.

(2) Put the negative probe lead into the black tip jack (leaving the positive probe in one of the red tip jacks - it doesn't matter which one), and adjust the bias pot for a maximum of 30mVDC (that's 30 millivolts, not 30V!).

Note: For the 2-EL34 30W amps, use the same procedure as above, but adjust the bias pot for a maximum of 60mV, which corresponds to 60mA per side.

Note: For the 2-EL34 50W amps, use the same procedure as above, but adjust the bias pot for a maximum of 45mV, which corresponds to 45mA per side.

(3) Put the red meter probe leads into the other red tip jack and check for 30mVDC (or 60mVDC for 30W amps). If the reading is higher than 30mVDC (or 60mVDC for 30W, 45mVDC for 50W), adjust the bias pot down until the meter reads 30mVDC (or 60mVDC for 30W, 45mVDC for 50W). If it is lower than 30mVDC (or 60mVDC for 30W, 45mVDC for 50W), leave it set where it was. Note: if the two readings differ by more than 5mV to 10mV, this indicates that the two tubes are too far out of match, and they probably should be replaced with another set that are better balanced. However, it will not harm the amplifier to use unbalanced tubes, as long as the bias pot is set for 30mV (or 60mV for the 30W, 45mV for 50W) on the highest current side. Check the voltage from the black tip jack to the left red tip jack and then to the right red tip jack, and adjust the bias for 30mV (or 60mV for 30W amps, 45mV for 50W amps) on the highest reading side. An imbalance can sometimes even sound good! Too high an imbalance, however, can cause high levels of hum in the output and loss of low end response.

(4) Once the bias is set, tighten down the lock nuts on the bias trimpot and you're ready to play.

Note: the 30mV setting (60mV for the 30W amp, 45mV for 50W) should be considered a *maximum* setting. It is perfectly acceptable to bias at a lower setting. This will result in longer tube life, lower background noise, and a cleaner tone, although if you go too low the increased crossover distortion may become objectionable. You may prefer the tone with the tubes biased colder, so feel free to experiment, it won't hurt anything as long as you don't bias the tubes too much hotter than the recommended setting. Our "optimum" bias point is around 25mV to 28mV for the 18W and around 45mV to 50mV for the 30W, and 25mV to 45mV for the 50W amps.

Note: It is normal for tubes to drift a bit, particularly when new, until they have had several hours of playing time on them. The bias will also vary a bit with variations in AC line voltage (a Variac is used to set the AC line voltage to 120V at the factory before biasing the tubes). Small variations like this shouldn't cause any problems, so don't worry about constantly checking the bias and driving yourself crazy trying to keep it at exactly the setting you chose. If a tube is biased too hot, the plate will glow a dull red color. The plate is the large grey metal "box" structure seen inside the tube. Don't confuse normal filament glow with plate glow. Plate glow can usually be seen as a "hot spot" near the center of the plate, sometimes accompanied by a "hot" smell and some "ticking" noises as the metal expands. Continued operation with glowing plates will soon

result in failure of the tubes, possibly damaging screen grid resistors or other amplifier components. The HT fuse should prevent any major damage to output or power transformers, or other expensive components.

Speakers

Changing speakers is like getting a whole new amp. Every model sounds completely different, some sounding quite good and some amazingly bad. The amplifier is particularly suited for use with Celestion loudspeakers, which give the characteristic "British" sound this amplifier is designed to create.

Celestion Greenbacks have less volume and a dip in the mids, which makes them nice and smooth. They are rated at 25W, so they make a nice match for the Intruder 18, but are a bit under-rated for the Intruder 30 in a 1x12 configuration. Celestion Alnico Blues are by far the loudest, with a nice chimey top end (but not extremely cutting highs) and full bottom end, but their rather pronounced midrange and very low power rating (18W) may make them undesirable for some users. If you do use this speaker, you may want to set the attenuator to the -3dB position when playing fully distorted. Jensen P12B "bell" alnico's are far brighter than the Celestion Alnico Blue, but don't have as good a low-end response. They are, however, rated at 50W and sound very nice when paired with the Alnico Blue in a 2x12 configuration. Celestion Vintage 30's have a very pronounced midrange, which may be a bit too harsh in an open-back configuration, which naturally enhances the midrange frequencies, and can sound a bit "boxy" with the wrong speaker. They do sound good for some blues styles, and can easily handle the power of the Intruder 18 or 30 in a 1x12 configuration. Celestion G12H30's are like a cross between the Greenback and the Vintage 30, with more low end than the Vintage 30 and not quite as pronounced a midrange, so they may tend to sound subjectively "better" in an open-back cabinet. The G12H30 is preferred in a 1x12 configuration by many customers, as is the Greenback. Newer Chinese-made G12H30's seem to have a rather harsh midrange, however. Heritage series Greenbacks are reportedly quite good. Your mileage may vary.

Closed-back cabinets have better and tighter bass, without the pronounced midrange hump of the open-backs, but they don't disperse on stage as well, and tend to be "beamy", sounding very loud out front, but if you stand above and to the front or back, you can't hear yourself as well. Still, there is nothing quite like the tone of a cranked up 4x12 cabinet loaded with Greenbacks! For a more portable closed back, a 2x12 loaded with either of those Celestions will do the trick nicely. Putting a 2x12 on each side of the stage fills up the tone very well, and provides an almost stereo-like sound field because of the cancellations that occur when standing in different places on stage. The Greenbacks are the recommended speaker for 2x12 and 4x12 cabinets for the "classic vintage" tone.

When changing speakers, always insure that the output impedance selector is set to match the impedance of the speakers connected to the output jacks. The Intruder has two paralleled output jacks, and can easily drive two 4x12 cabinets to extremely loud volume levels, despite the 18W or 30W rating. Note: when using two cabinets, set the impedance to half the value of the cabinets. For example, if you are using two 16 ohm cabinets, set the impedance selector to 8 ohms. If you are using two 8 ohm cabinets, set the impedance selector to 4 ohms. You cannot safely run two 4 ohm cabinets.

Troubleshooting

Pilot lamp not lit:

Is the amplifier plugged into a functional outlet of the appropriate voltage?

Is the mains fuse blown? If so, replace with the appropriately rated fuse. If the fuse again blows, the amplifier may have a shorted output tube or blown rectifier diodes. Replace the tubes and fuse, and power the amplifier up again. If the fuse still blows, the amplifier will need to be serviced. If tubes don't fix the problem, it is most like the rectifier diodes that are bad, and they should be replaced first.

Pilot lamp lit, but no sound, low sound, or intermittent sound:

Is the HT fuse blown? If so, replace with the appropriately rated fuse. If the fuse again blows, the amplifier may have a shorted preamp tube, output tube or rectifier tube. Replace the tubes and fuse, and power the amplifier up again. If the fuse still blows, the amplifier will need to be serviced.

Is the speaker functional and plugged in correctly? Insure the amplifier's output impedance selector is correctly set to match the speaker in use.

Is the guitar cord functional? Bypass any pedals and plug straight in with a known good cable to test.

Is the effects loop jack dirty or broken? Try plugging a cord into the effects loop jack and back out several times to "clean" the jack contacts. If the sound comes back, you may need to take the amp in for replacement of the jack or for cleaning of the switching contacts on the jack (these bypass the loop when nothing is plugged in, and may get dirty and become intermittent). In a pinch, you can buy a stereo plug from Radio Shack and solder the tip and ring terminals together and plug it back into the effects loop jack. This will be a removable "bypass" plug that will allow the amp to properly function if the effects loop jack has become intermittent or the switching contact has been broken.

No effects:

Is the insert cable fully plugged into the jack on the back of the chassis?

Is the effects unit designed for pro level (0dBu nominal, +4dBu max) levels? The Intruder will not work with "stompbox", or guitar-level effects, as they are designed for very low guitar signals.

Is the effects unit in bypass mode?

Does the signal presence LED (if there is one) on the effects unit light when you hit a chord?

Humming or buzzing noise:

Unplug the guitar cord from the input and unplug any cable used for jumpering the two inputs. If the buzzing stops, try replacing the cord. Be sure to use only guitar cables, not unshielded speaker cables! If in doubt, unscrew the connector and look to see if there is a shield around the center connector. Some smaller speaker cables are easily mistaken for guitar cables. Fluorescent lights and light dimmers can be a source of hum/buzz, as can computer monitors.

If the buzzing only occurs when using effects or a tuner, the problem is likely a ground loop hum (in particular, the Korg rack mount tuner seems to be susceptible to ground loops). If this is the case, the hum/buzz will go away if the guitar is plugged straight in to the amplifier. The solution is to use a ground loop hum eliminator (there are a few on the market) or make a guitar cord with a "telescoping shield" to go from the output of the effects to the input of the amp. This is a cord with the shield cut on one end. The cut end should go into the amplifier input jack, and the end with the shield must go into the output of the effects unit/tuner. In a emergency, a ground lift plug (three-prong to two-prong adapter) can be used on the tuner/effects box, but this is not recommended due to safety concerns. If you do use a ground lift adapter, you should check to see if there is any AC voltage present from the chassis of the rack effect/tuner to the chassis of the amplifier. If so, do not use the adapter!

If the buzzing only occurs when playing the guitar, try replacing the speaker or plugging the amplifier into an extension speaker cabinet. A buzzing noise from the speaker can indicate a blown speaker, or one with a warped frame. Buzzing noises that occur only on certain notes can be indicative of a cabinet problem. Check all rear panel screws, handle screws, and chassis mounting screws to insure they are tight. Check to insure there are no speaker or reverb cables rattling against the baffle board. Check the two screws that hold the nameplate to the front of the amplifier, as the nameplate can cause a rattle or buzz if it is loose enough to vibrate against the front panel board. If the nameplate buzzing cannot be stopped by tightening the screws, a small piece of double-stick tape affixed to the rear of the nameplate will dampen the vibration. Some speakers are known to exhibit "cone cry", or "ghost noting", which is a second, out-of-tune note that occurs only when playing certain notes on the guitar. If this is suspected, try another speaker to see if the problem goes away.

Some preamp tubes are more susceptible to filament-induced hum than others. The ECC83/12AX7 is a dual triode (two tubes in one package), and some tubes will exhibit hum in only one of the two sections, or in both. Try replacing the preamp tubes with different ones to see if the hum decreases. The JJ/Tesla ECC83S is the least microphonic and least noisy current-manufacture tube we have found, but are a bit compressed sounding compared to longer-plate tubes, and as such, may not be preferred by everyone. The Chinese 12AX7s are a good compromise between low microphonics and a more "open" tone.

Hissing noise:

A small amount of hiss is a characteristic of higher-gain tube amps, and is generally unavoidable. Excessive levels of hiss are usually caused by bad preamp tubes.

Some preamp tubes have more hiss than others. Try replacing the preamp tubes with different ones to see if the hiss decreases.

"Ticking" noise:

Some tubes tend to exhibit a low-level "ticking" noise right after the amplifier is taken off standby. The noise stops after a second or two, when the tube has had a chance to stabilize, and is not indicative of a problem.

Ringling noise or feedback that occurs with no guitar plugged in:

If the amplifier exhibits a "ringing" noise, especially when tapping on the chassis, or if it makes a howling or whistling feedback noise when the volume is turned up but no guitar is plugged in, there is probably a microphonic tube in the amplifier, likely in the first position (the small tube closest to the input jacks), or in the reverb recovery position. Remove the shield and lightly tap on the tube with the volume turned up. A small amount of noise is normal, but a loud, ringing noise indicates a microphonic tube, which should be replaced. In an emergency, you can swap the other ECC83/12AX7 preamp tubes around until you find the least microphonic one to put in the first position. Typically, the phase inverter tube is the least susceptible to microphonics, so the most microphonic tube should be used in this position. The least microphonic tube should be used in the first position, and the next least microphonic tube should be used in the reverb recovery position. When purchasing tubes, be sure to purchase tubes that have been tested for microphonics. Many vendors do not test for microphonics, and you could end up wasting your money on tubes that are unsuitable for use. Combo amps are more susceptible to microphonics than heads, because the sound field coming from the back of the speaker can excite the tube into oscillation. In rare cases, the EL84 or EL34 output tubes can be microphonic, particularly if they are at the end of their lifespan.

Specifications

Output Power:	18W for the 2-EL84 model, 30W for the 30W 2-EL34 model, and 50W for the 50W 2-EL34 model at onset of clipping into resistive load at rated impedance.
Input Impedance:	1Megohm
Input sensitivity:	10mV for output clipping, all volume/tone controls fully up, ali mode.
Tube complement:	Four ECC83/12AX7 two EL84 (18W model), or two EL34 (30W or 50W models).
Fuses:	18W/100V-120V: Mains: 2A slo-blo, HT: 500mA fast-acting 18W/200V-240V: Mains: 1A slo-blo, HT: 500mA fast-acting 30W/50W 100V-120V: Mains: 3A slo-blo, HT: 500mA fast-acting 30W/50W 200V-240V: Mains: 1 1/2A slo-blo, HT: 500mA fast-acting
Speakers:	Aiken A12L speaker is standard in combos.
Dimensions:	Head: 20" W x 8 3/4" H x 9" D 1x12 Combo: 25"W x 18 1/2"H x 10 1/4"D
Weight:	18W head: 22 lbs 30W head: 29 lbs 50W head: 29 lbs 18W combo: 45 lbs 30W combo: 52 lbs 50W combo: 52 lbs